

Register your product and get support at

www.philips.com/welcome



 
 
 
 
 
32PFL5404H/12
32PFL5604H/12
37PFL5604H/12
42PFL5604H/12
47PFL5604H/12
32PFL5624H/12
42PFL5624H/12
52PFL5604H/12
32PFL7404H/12
42PFL7404H/12
47PFL7404H/12
52PFL7404H/12
32PFL7864H/12
42PFL7864H/12
47PFL7864H/12

Quick







Start




PHILIPS

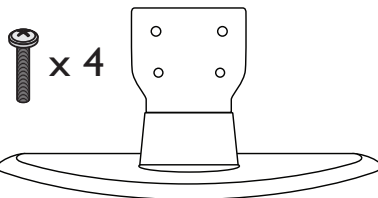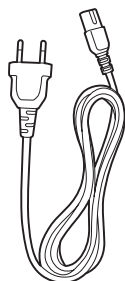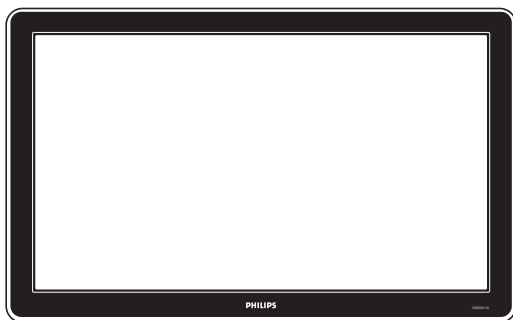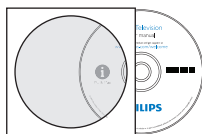

1

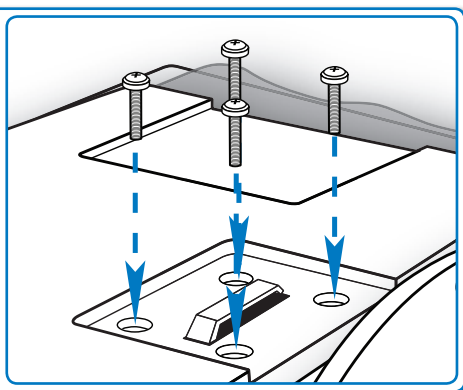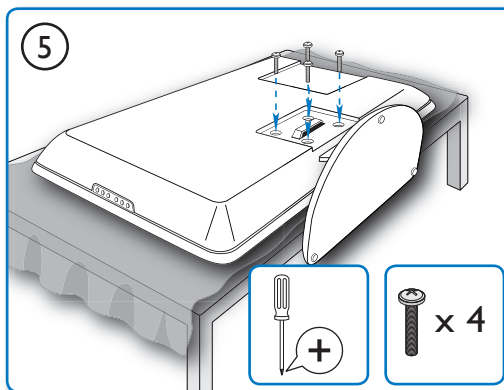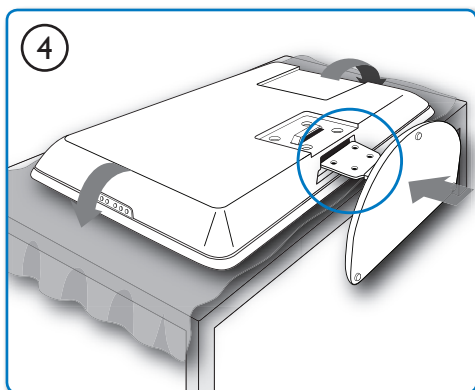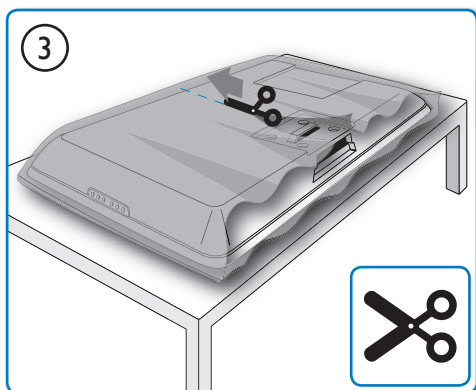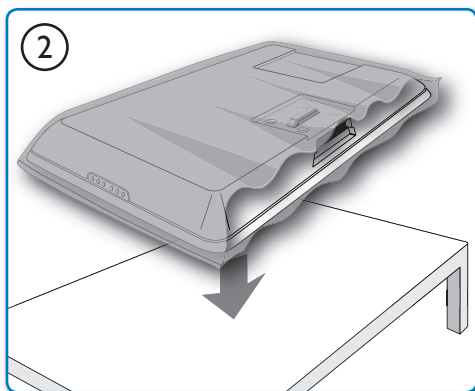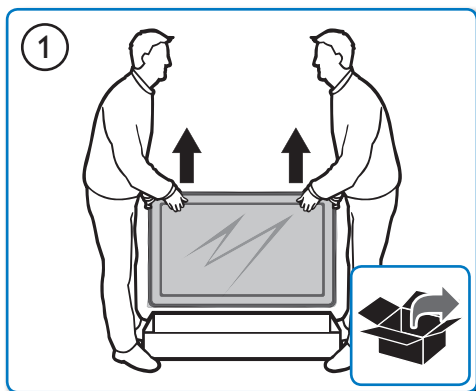      




2

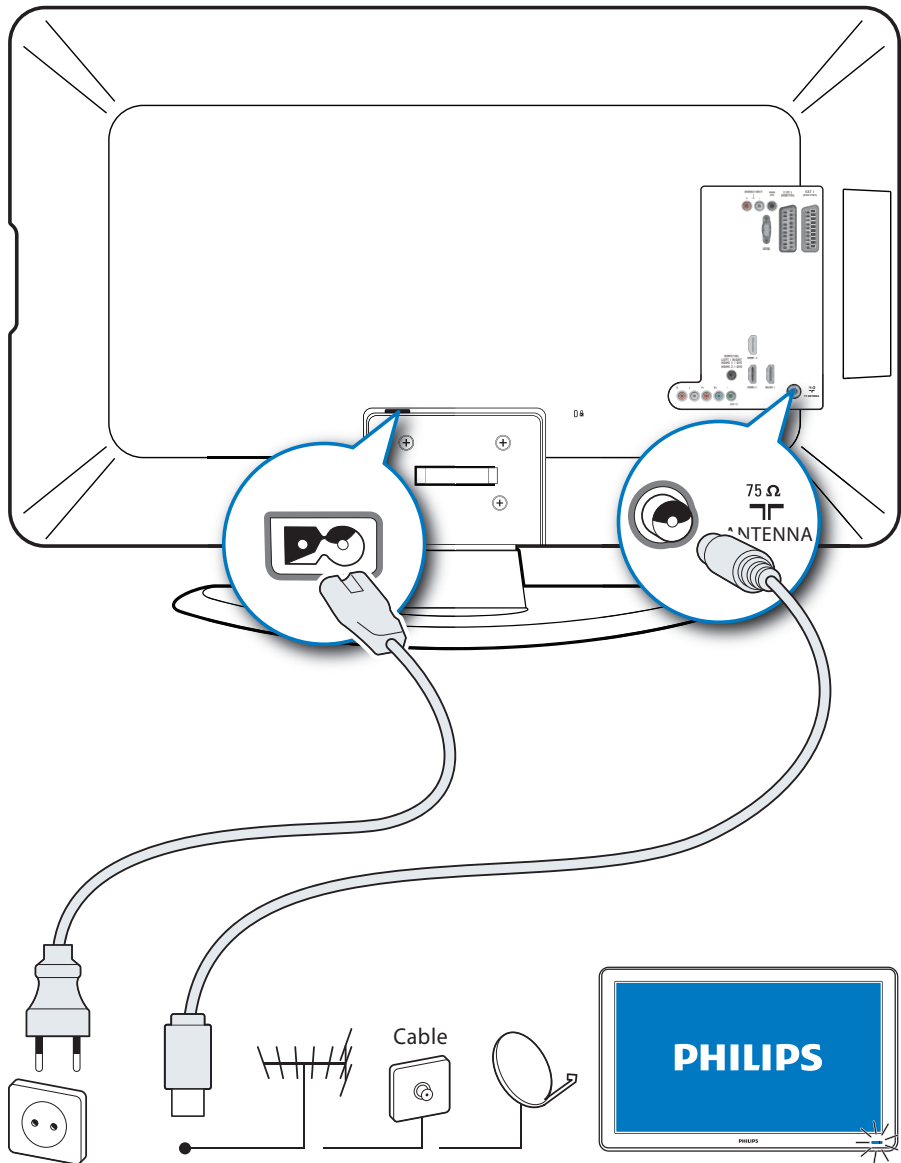 

3

①

   
AAA
x 2

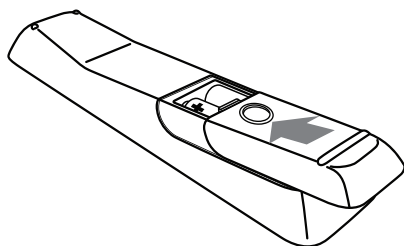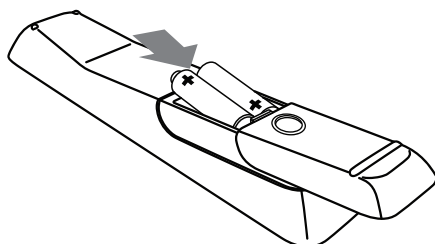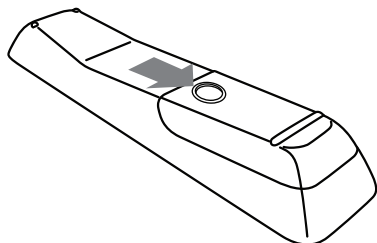

2


Select your language.

 Celina
Dansk
Deutsch
Ελληνικά
English
Español
Français
Hrvatski

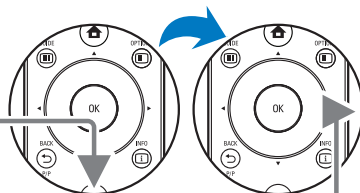


Select your country.

 Netherlands
Norway
Poland
Portugal
Romania
Germany
Denmark
France

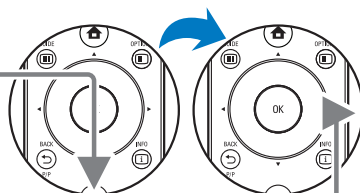


Select Shop only if this TV is used in a shop.

 Home
Shop

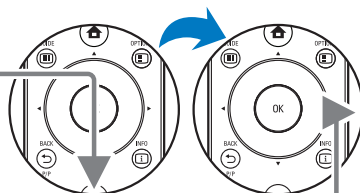

Start to search channels now. This can take a few minutes.

 1 Start Settings Skip **234**

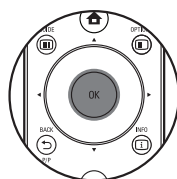



•
•
•

Enjoy your television!

The TV Home screen opens when you close this screen.
The Home screen holds all activities you do with the TV.
To start an activity, select the item and press OK.



 
 
123 Finish **4**

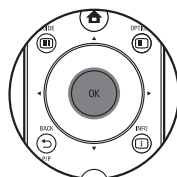






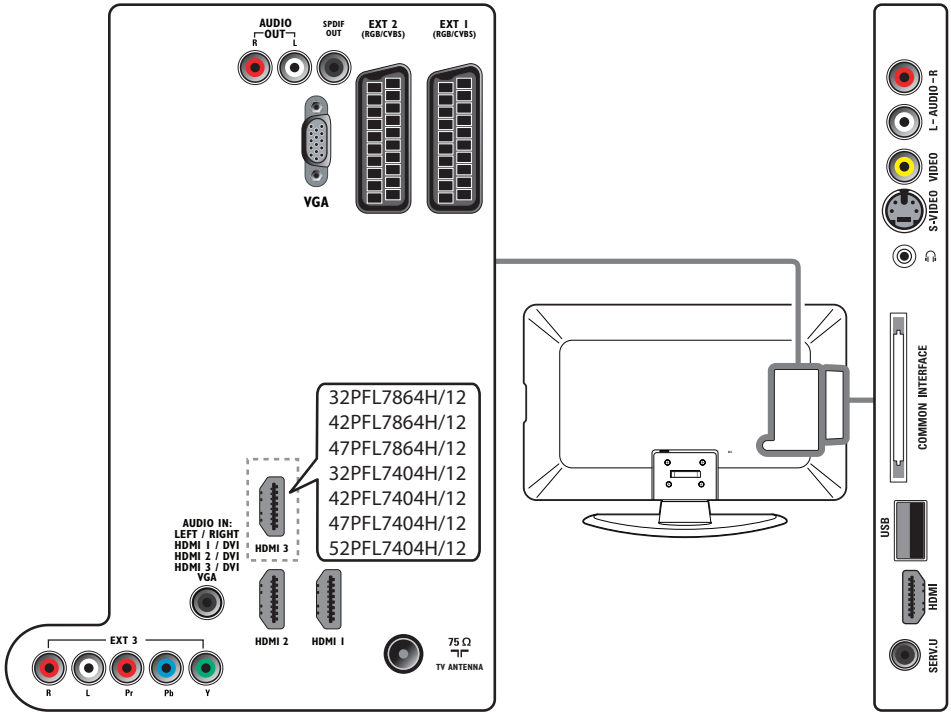


HDMI	
☆☆☆☆☆	
YPbPr & AUDIO L/R	
☆☆☆☆	
S-VIDEO & AUDIO L/R	
☆☆☆	

SCART	
☆☆	
AUDIO L/R & VIDEO IN	
☆	

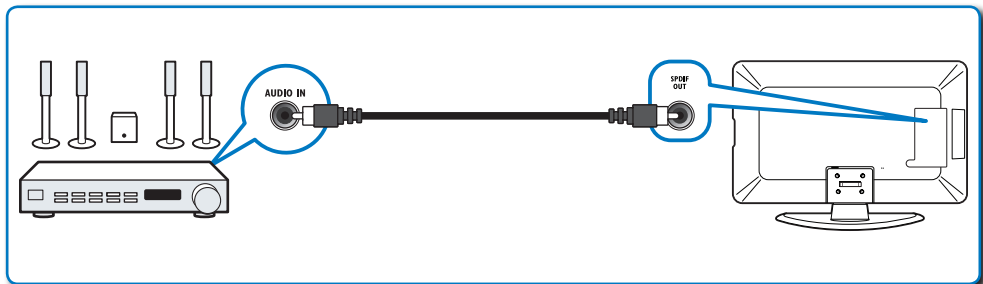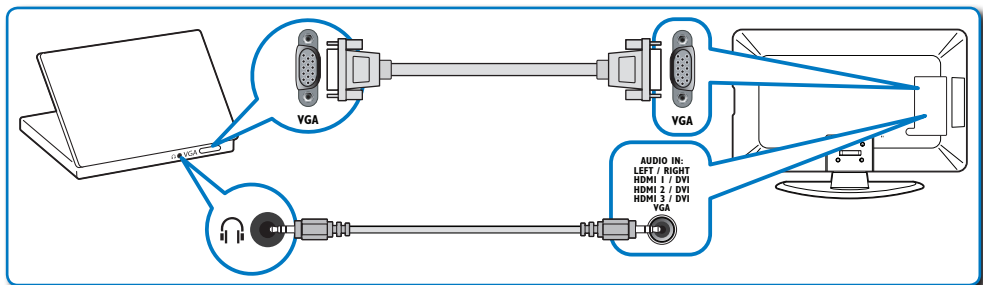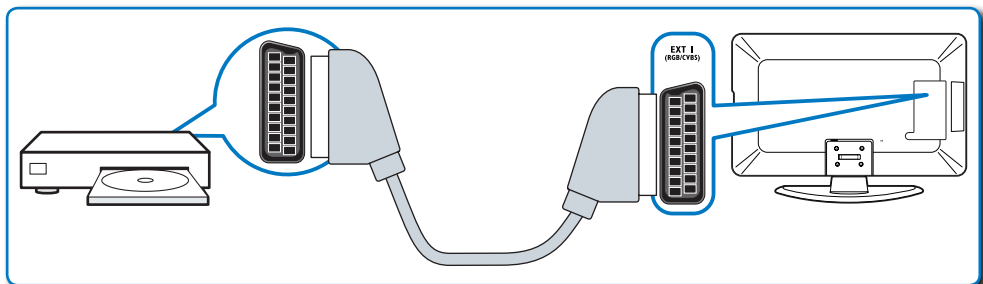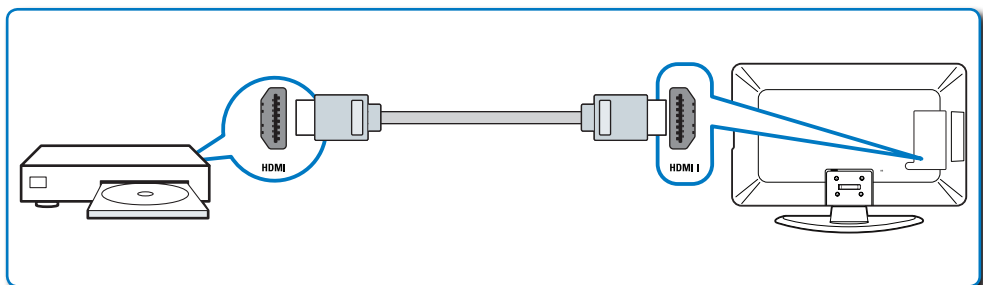    

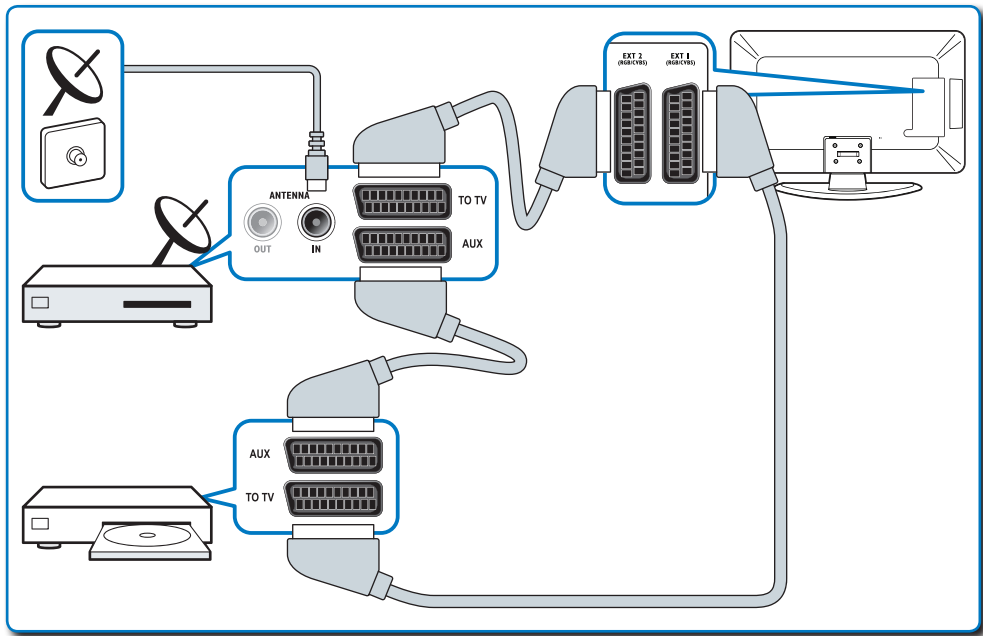 

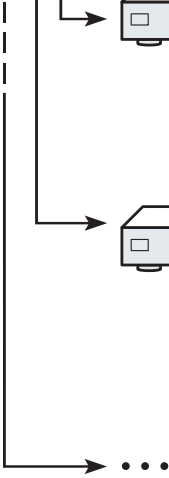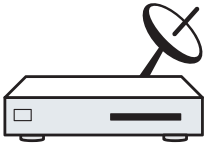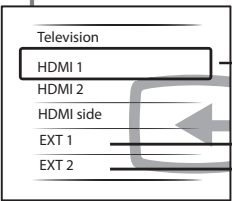     



www.philips.com/support



Specifications are subject to change without notice
Trademarks are the property of Koninklijke Philips Electronics N.V.
or their respective owners
2009 © Koninklijke Philips Electronics N.V. All rights reserved.

